



PSR-I610/510

ADDITIONAL STYLES

STYLES FROM PSR-I500



PSR-I610/510 – ADDITIONAL STYLES

STYLES FROM PREVIOUS MODEL PSR-I500

STYLE PACK 1 - NORTH + DEVOTIONAL

- 1 Bhajan1
- 2 Bhajan2
- 3 Bhajan3
- 4 Bhajan5
- 5 Qawwali
- 6 ModernQawwali
- 7 Bhangra1
- 8 Bhangra2
- 9 Bhangra3
- 10 Boliyan

STYLE PACK 2 - MOVIE & POPULAR INDIA

- 1 Bollywood2
- 2 Bollywood4
- 3 Bollywood5
- 4 IndianPop
- 5 HindiBallad
- 6 GoanPop
- 7 South1
- 8 IndianDance1
- 9 IndianDance2
- 10 Dandiya

STYLE PACK 3 - REGIONAL FOLK INDIA

- 1 Rajasthan1
- 2 Rajasthan2
- 3 East2
- 4 East3
- 5 East4
- 6 FolkEast
- 7 FolkHills2
- 8 FolkHills3
- 9 Lavni
- 10 West2
- 11 West3
- 12 BaleBale

Yamaha External Style Installation

Quick Start Guide for PSR-I610 / PSR-I510

Install New Styles in 5 Minutes


Load your .STY files from USB and start playing instantly.

1. Copy Styles Files in USB

Copy the .STY file to the root folder of your USB flash drive.


2. Connect USB

Insert into USB TO DEVICE port. Make sure that **USB** is shown (lit continuously) in the upper right of the display.

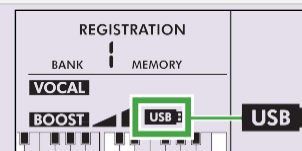


3. Open File Menu

Hold SHIFT and press FUNCTION to open File Control display

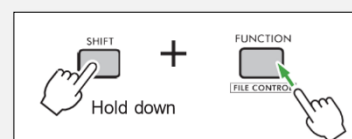

4. Load Style

Select "Load Style" using VOICE dial.
Then select Style file using STYLE dial.

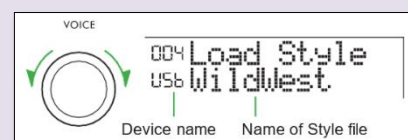


5. Choose User Style Slot

Hold **[SHIFT]** and press **[+/YES]**
Display shows "Load To?"

Select the destination slot using the **[STYLE]** dial

- PSR-I610: 393–402
- PSR-I510: 383–392

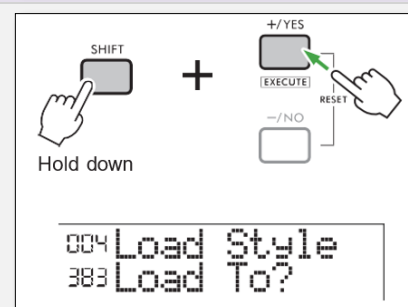

6. Confirm Load

While holding **[SHIFT]**, press **[+/YES]** again.
The display will show:


"Load OK?"

7. Execute Load Operation

Press the **[+/YES]** button to execute the Load operation.

This confirms the loading operation.

To cancel, press **[-/NO]**

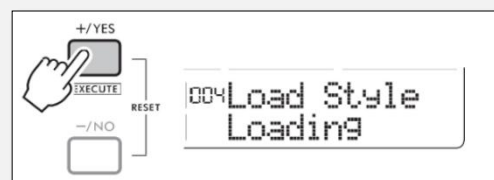

8. Exit and Play the Loaded Style

Press **[SHIFT]** to exit the File Control display.

Then:

- Select the loaded User Style from the Style list
- Press **[START/STOP]** to play and check the Style

This confirms that the external Style has been installed successfully.

Note: Loading a new Style will overwrite the selected User Style slot. Do not switch off the keyboard or remove USB while loading.