


YAMAHA

FINGER DRUM PAD

FGDP-30

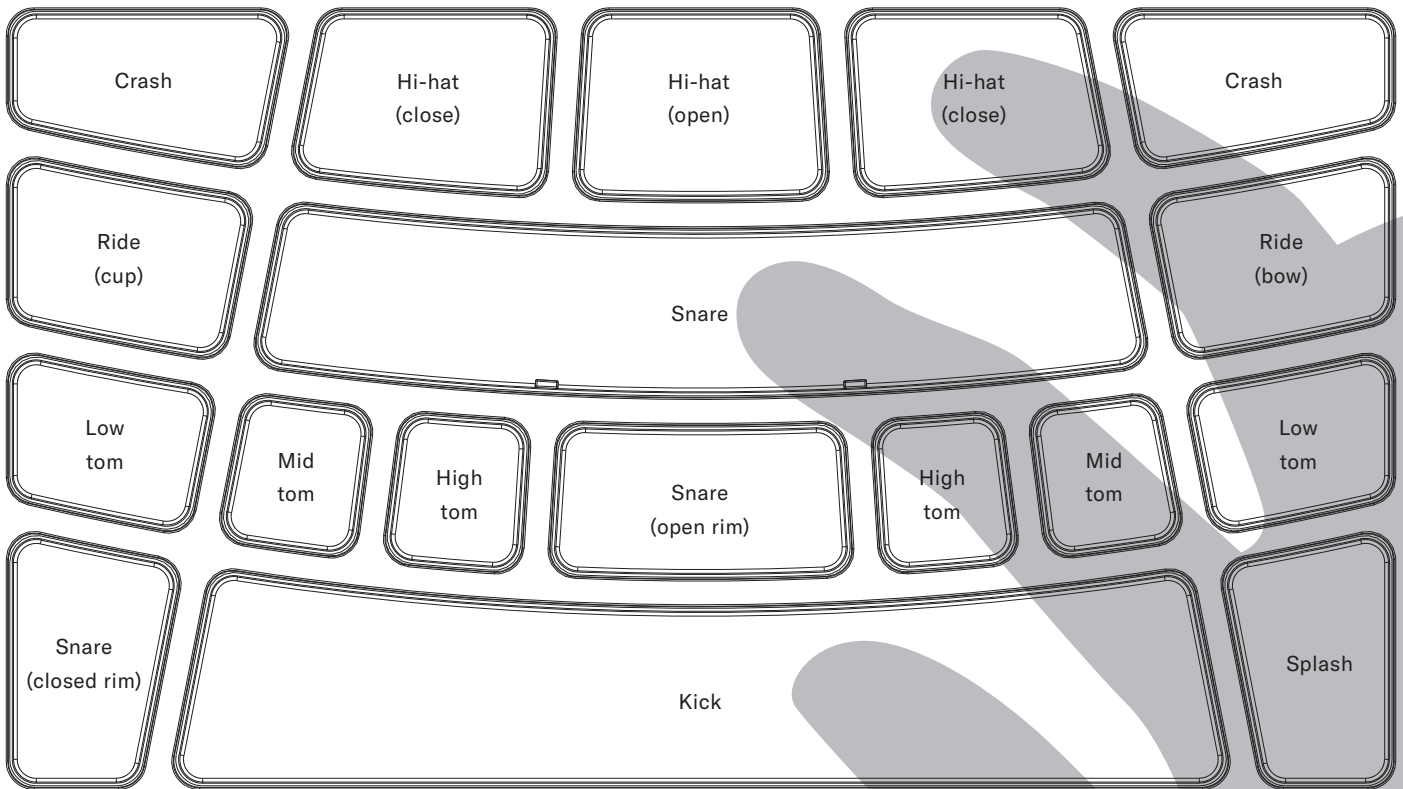

| | 1 | & | 2 | & | 3 | & | 4 | & | 5 | & | 6 | & | 7 | & | 8 | & |
|-------|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| HH | x | x | x | x | x | x | x | x | | | | | | | | |
| Snare | | | | | | | | | | | | | | | | |
| Tom | | | | | | | | | | | | | | | | |
| Kick | | | | | | | | | | | | | | | | |
| | R | R | R | R | R | R | R | R | L | R | L | R | L | R | L | L |

Pad layout setting "Right" (When playing with the right hand) / Kit No.1, "Maple" selected

Scan for more information

