

PSR-SX920 & SX720

Church Organ

VOICE

	Voice Name	Voice Type	Voice Number		
			MSB#	LSB#	Prg#(1)
1	Org FluteChorus1	Regular	49	8	1
2	Org FluteChorus2	Regular	49	8	2
3	Org Prinzipal	Regular	49	7	2
4	Org Pleno	Regular	49	8	4
5	Org Tutti	Regular	49	7	1
6	Org Cornet	Regular	49	8	6
7	Org Grand Jeu	Regular	49	8	7
8	Harmonium Single	Regular	49	8	8
9	Harmonium Dble	Regular	49	7	3
10	Harmonium Trpl	Regular	49	8	10
11	Org Bourdon 8'	Regular	49	8	11
12	Bourdon+Trumpet	Regular	49	8	12
13	Bourdon+Scharff	Regular	49	8	13
14	Org Chapel 1	Regular	49	8	14
15	Org Chapel 2	Regular	49	8	15
16	Org Chapel 3	Regular	49	8	16
17	Org Chapel 4	Regular	49	8	17
18	Positif 8' 4'	Regular	49	8	18
19	Positif 8' 2'	Regular	49	8	19
20	Positif Even	Regular	49	8	20
21	Flute+ClarinetMW	Regular	49	8	21
22	Prinz+ClarinetMW	Regular	49	8	22
23	Prinz+Scharff MW	Regular	49	8	23
24	Cornet+Mixtur MW	Regular	49	8	24
25	Pleno+Scharff MW	Regular	49	8	25
26	Bourdon+Oboe MW	Regular	49	8	26
27	Bourdon+Trpt MW	Regular	49	8	27
28	Bourdon-Flute	Regular	49	8	28
29	Bourdon-Chapel1	Regular	49	8	29
30	Bourdon-Chapel2	Regular	49	8	30
31	Prinzipal-Flute	Regular	49	8	31
32	Prinzipal-Cornet	Regular	49	8	32
33	ClassOR Bourdon	Regular	49	8	33
34	ClassOR Flute 1	Regular	49	8	34
35	ClassOR Flute 2	Regular	49	8	35
36	ClassOR Cornet	Regular	49	8	36
37	ClassOR Prinz	Regular	49	8	37
38	ClassOR Pleno	Regular	49	8	38
39	ClassOR GranJeu	Regular	49	8	39
40	ClassOR Tutti	Regular	49	8	40

STYLE

Style Name	Style Type
1 OrganPlay 1	Normal
2 OrganPlay 2	Normal
3 OrganPlay 3	Normal
4 Choir&Guitar	Normal
5 Strings&Harpsi	Normal

REGISTRATION

Regist Name	
1	Church Organ 1
2	Church Organ 2

DEMO

Demo Name	
ChurchOrgan Demo	